

iDIGITAL™

**CHARGE TOWER
5 PORT USB DESKTOP CHARGER**



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

This product is designed to charge up to 5 USB rechargeable products, such as iPhone, iPad, iPod, Samsung, HTC, Blackberry, Nokia, Sony, Android, Tablet & more, at a time.

Getting Started

- Remove the 5 Port USB Desktop Charger from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- 5 Port USB Desktop Charger
- AC power cord
- Instruction Manual

Key Features

- 5 USB ports
- Charge up to 5 devices simultaneously
- Designed for home or work or travel

IMPORTANT SAFETY INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSE-HOLD USE. WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:


WARNING – To reduce the risk of burns, electric shock, fire or injury to persons:

1. Read all instructions before using the appliance.
2. For indoor and information technology equipment use only.
3. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
4. Close supervision is necessary when any appliance is used by or near children or by invalids.
5. Unplug the appliance from outlet when not in use and before cleaning. Do not leave appliance unattended when it is plugged in. Keep cord away from heated surfaces.
6. Do not operate this appliance with a damaged cord or plug if the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest service facility for examination, electrical or mechanical adjustment or repair. No repairs should be attempted by the consumer.
7. Use appliance only for intended use as described in this instruction. Do not plug into double

adaptors, power boards or extension leads.

8. Clean only with a dry cloth.
9. Protect the power cord from being walked on or pinched particularly, and the point where they exit from the apparatus.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Use on any 230 volt, 50/60 Hertz AC electric outlet (ordinary house current).

Description of Parts

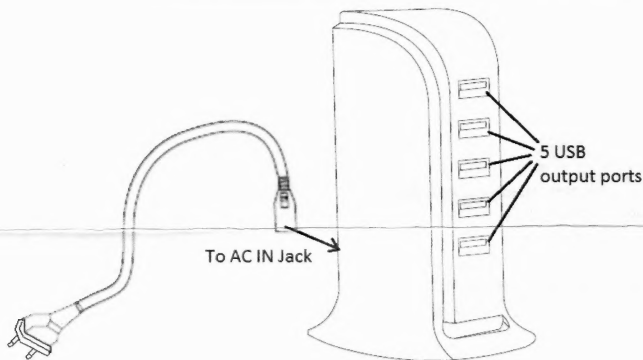

INSTRUCTIONS FOR USE

- Connect the small plug from the included AC power cord to the AC IN Jack on the rear of the Charge Tower.
- Plug the AC power cord to a standard AC wall outlet supporting 230 Volt, 50/60 Hertz.
- Insert the USB cable (not included) into the USB port of the unit and the other end of the USB cable to your phone or other USB rechargeable product for recharging.
- When the phone or rechargeable product is fully recharged, disconnect it from the Charge Tower.

Care and maintenance

Read the following recommendations before using the device.

- Do not expose the device to liquid, moisture or humidity. This may affect product's internal circuit.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as it may cause to distort certain plastic parts.
- Do not dispose of the device to fire.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fell down the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may cause damage.

Note:

iPhone®, iPad® and iPod Touch® are registered trademarks of Apple Inc.

Android™ is a trademark of Google Inc.

All the brand names mentioned in here, are trademarks of their respective owners.

Product Specifications:

Input: AC 230V 50/60Hz 0.7A

Output: DC 5V 5A total (Max)

Dimensions: 7.8 x 11.1 x 6.6 cm

Weight (including AC power cord): 200 grams

Charges up to 5 USB devices at a time

Imported by:

TRS Trading Group Pty Ltd

245 Racecourse Road

Kensington VIC 3031

Made in China